

# INSTRUCTION AND SAFETY MANUAL

P9R, P9RK cal. 9x19 mm para  
DOUBLE ACTION SEMI-AUTOMATIC PISTOL

## PLEASE READ THIS BOOKLET CAREFULLY BEFORE USING YOUR WEAPON

### CAUTION

Failure to heed the warnings in this booklet may result in serious injury to you or others, as well as damage to the firearm or other property.

Take note of the following warnings on gun handling before attempting to use your pistol:

- 1/ DON'T RELY ON YOUR GUN'S SAFETY. TREAT EVERY GUN AS IF IT WERE LOADED AND READY TO FIRE.
- 2/ NEVER CROSS A FENCE, CLIMB A TREE OR JUMP A DITCH WITH A LOADED GUN.
- 3/ NEVER LOAD OR CARRY A LOADED GUN UNTIL YOU ARE READY TO USE IT
- 4/ WATCH YOUR MUZZLE SO THE OTHER FELLOW DOESN'T HAVE TO.
- 5/ KEEP GUNS AND AMMUNITION SEPARATELY AND IN LOCKED STORAGE.
- 6/ DON'T SHOOT UNLESS ABSOLUTELY SURE OF YOUR TARGET AND WHAT IS BEYOND IT.
- 7/ KNOW THE RANGE OF YOUR GUN.
- 8/ ALWAYS WEAR EYE AND EAR PROTECTION WHEN SHOOTING.
- 9/ ALWAYS BE SURE THE BARREL IS CLEAR OF OBSTRUCTIONS... AND ONLY CARRY AMMUNITION SPECIFICALLY INTENDED FOR THE GUN YOU ARE USING.
10. ALWAYS BE SURE THE BARREL IS CLEAR OF OBSTRUCTIONS AND ONLY CARRY AMMUNITION SPECIFICALLY INTENDED FOR THE GUN YOU ARE USING.
- 11./ ALWAYS CARRY HANDGUNS WITH THE HAMMER DOWN ON AN EMPTY CHAMBER.

### WARNING

Use only original, high quality, commercially manufactured ammunition which is in good condition. Only use ammunition of the caliber for which your pistol is chambered. You will find the correct caliber engraved on the slide of the barrel. Never use ammunition of any other caliber. The use of handloaded, reloaded or other non-standard ammunition will void all warranties.

### DIRECTIONS FOR DISASSEMBLY

- 1./ With the safety "ON" and the clip removed, pull the slide to the rear and manually set the slide release lever in its notch (Fig. 1.) While firmly holding slide to rear with left hand, use index finger of right hand to push slide release lever pin, opposite side of frame out of frame seat (Fig. 2.)



Fig. 1



Fig. 2



Fig. 3

Still holding the slide to rear, remove slide release lever mechanism completely from frame

Allow the slide to go forward slowly and pull it completely off the frame (Fig. 4.)



Fig. 4



Fig. 5



Fig. 6

- 2./ To remove the barrel from the slide, hold the slide bottom side up in your left hand. With your right hand push the recoil guide spring assembly toward the forward end of slide and out of its notch in the barrel (Fig. 5.) The spring is under tension. Release tension slowly and pull out and away from the slide.
- 3./ To remove the barrel from the slide, pull barrel upward and to the rear, removing it from the slide (Fig. 6.) The recoil spring may be removed from the spring guide pin. (The small end of spring fits over the guide pin). No further disassembly is required or recommended for cleaning purposes.

## DIRECTIONS FOR ASSEMBLY

1/ To reassemble, place the barrel back into the slide, notch up /Fig.7/

2/ Assemble the recoil spring to the spring guide pin, making certain the small end of the spring is over the spring guide pin /Fig.8/



Fig. 7



Fig. 8

Insert the recoil spring assembly into the recoil spring housing /bottom part of slide/ Apply tension to the recoil spring and slide the head of the assembly back into the notch in the barrel.

3/ With the safety „ON“, hold the frame by the grips in the grips in the right hand. With the left hand hold the slide by the grooves on the side and slide it back over the frame rails. /Fig.10/. Apply enough pressure to push the slide almost all the way to the end of its travel. Note: Align notch in slide with release lever recess in frame.



Fig. 9



Fig. 10

4/ While still applying back pressure to the slide, replace the release lever, pushing it all the way through the frame. /Fig. 11/

With the right hand thumb hold down the release lever and allow the slide to ease forward. Replace clip /Fig.12/



Fig. 11



Fig. 12

## OPERATING INSTRUCTIONS SAFETY

The manual safety is on the left side of the slide. It is „ON“ when the lever is turned down to cover the red dot. It is „OFF“ when the lever is turned up exposing the red dot /gun is now ready to fire/. The safety lever locks the firing pin so it cannot strike the cartridge in the chamber. It shields the firing pin against contact from the hammer, safely unlocks the hammer and prevents the hammer from being cocked.

When hammer is cocked, keep your finger away from the trigger and keep the muzzle pointed in a safe direction. Push the safety lever down with the thumb. The hammer will „snap“ forward but cannot strike the firing pin.

Some shooters prefer to lower the hammer without letting it „snap“ down. This may be done by holding back the hammer firmly with the thumb and using the other hand to turn the safety lever „ON“. This locks and shields the firing pin. Now you can ease the hammer down.

### Warning

Never carry this pistol with cartridge in the chamber without having the safety „ON“.

### WARNING

When turning the safety „ON“ or „OFF“, always keep your finger off the trigger and the muzzle pointed in a safe direction.

Never use the trigger for lowering the hammer. Always use the safety lever.

Never totally depend on a mechanical safety. Always practice cautious gun handling.

## **SAFETY DISCONNECT**

The disconnect prevents the pistol from being fired unless the slide is completely closed. The disconnect is automatic and requires no operation by the user.

## **WARNING**

**Always point the muzzle in a safe direction.**

Always clean all grease and oil from the chamber and the bore before loading. Be sure there is no obstruction in the barrel. Any foreign object in the barrel could cause a burst barrel or other damage to the firearm as well as serious injury to the shooter or to others.

## **LOADING**

1/ To remove the magazine turn the safety „ON“ Depress the magazine release button and withdraw the magazine /Fig.13/

2/ to load the magazine, push down the feeder ramp on the magazine with the rim of the cartridge and carefully shove the round under the magazine shell guides. Repeat until the magazine is full /14 rounds/ Fig.14.



Fig. 13



Fig. 14



Fig. 15

3/ To empty the magazine, push each cartridge forward until it is no longer held by the shell guides.

4/ To chamber the first round, with the safety lever „ON“ and your fingers off the trigger, insert the full magazine into the pistol until it is held by the magazine catch. Holding the pistol with the right hand, grasp the grooved surfaces at the rear of the slide with the left hand and pull the slide fully to the rear and release. The slide will snap forward chambering the first round. The hammer will remain uncocked until the safety lever is turned „OFF“ /Fig.15/

## **CAUTION**

Damaged or bent magazine shell guides will cause malfunctioning. **DO NOT FORCE CARTRIDGES.**

## **UNLOADING**

With the safety „ON“ remove the magazine. Move the slide to the rear and eject any cartridge left in the chamber. Hold the slide rearward and check in the chamber and magazine to make certain the pistol is empty.

## **WARNING**

Always remember to unload the chamber after removing the magazine.

Never point a firearm at anything you do not intend to shoot. Always point the muzzle in a safe direction. Keep your fingers off the trigger until you are ready to fire.

Never leave a firearm cocked and ready to fire. It accidentally could be discharged.

Never fire any pistol with any part of your body over or next to the ejection port, or in any position where you could possibly be hit by the movement of the slide.

Never allow others to stand beside you where they may be hit by an ejected cartridge case. Make certain there is an unobstructed path for safe ejection of the fired case.

## **FIRING**

The double-action operation of the MBK pistol offers the shooter two ways to cock the hammer for the first shot:

1/ To fire the pistol in the double action mode for fast first shot when extreme accuracy is not needed, point the pistol at the target, push the safety to „OFF“, take aim and pull the trigger through its entire length of travel. This automatically cocks the hammer and drops it in one motion, firing the pistol /Fig.16/

2/ To fire the pistol in the single action mode when more accurate aim is needed for the first shot, point the pistol at the target, push the safety to „OFF“ and cock the hammer by pulling it all the way to the rear with the thumb. Be certain to keep your finger off the trigger while cocking the hammer. The trigger will retract to its rearmost position. To fire, take aim and apply a slight amount of pressure to the trigger. This will cause the hammer to fall and fire the pistol. /Fig.17/

Fig. 16



Fig. 17



Fig. 18



The recoil from the first shot will automatically cock the hammer and the trigger at the single action position for each shot after that until the magazine is empty. The slide will remain open after the last shot is fired (Fig. 18).

If you do not wish to continue shooting, turn the safety „ON“ and remove the empty magazine. Slowly pull the slide back to release the slide lock lever and allow the slide to run forward slowly. The hammer will now be uncocked. If shooting is temporarily halted and some cartridges remain in the pistol, immediately turn the safety „ON“.

If shooting is continued, remove the empty magazine and insert a full one. Keeping your finger off the trigger, pull the slide back and release it. The slide will snap forward chambering the first round. The hammer will be cocked and the pistol will be ready to fire.

### WARNING

Always wear shooting glasses and ear protectors when you are shooting. Other people who are close by should be protected.

### CARE AND CLEANING

Your MBK pistol has been packaged at the factory and preserved with a light coating of protective grease and oil. Before loading, make sure that all packing grease and oil has been cleaned from the bore and exposed firing mechanisms.

### CAUTION

Always make absolutely sure your pistol is unloaded before you disassemble it for cleaning.

The following steps will keep your pistol in top condition:

- 1/ Disassemble and clean the barrel and chamber with a quality cleaning solvent, using a brush to remove all residue. Wipe dry and lightly re-oil with a high quality gun oil.
- 2/ Clean all exposed internal surfaces with a brush or swab and solvent. Pay particular attention to the bolt face where the firing pin protrudes as well as under the extractor.
- 3/ Lightly lubricate all moving parts, including the contact points of the slide and frame, with a light, high quality gun oil. Wipe away any excess oil.

### WARNING

Check to be sure that no cleaning patch or other obstruction remains in the bore or chamber after cleaning. Any foreign matter in the barrel could result in a burst barrel or other damage to the firearm, or cause serious injury to the shooter or others.

### TRANSPORTATION AND STORAGE

Always keep your firearm unloaded when transporting it to and from shooting. Store your firearm separate from ammunition, locked away and out of the reach of children and other inexperienced persons.

### AMMUNITION SPECIFICATIONS

The MBK pistol is designed to use cartridges as listed below.

Caliber	BULLET	BULLET	MUZZLE
	TYPE	WEIGHT	VELOCITY
		Grains feet per sec.	
9 mm Luger para	Metal Case	123	1120
9 mm Luger para	Jacketed, Hollow Point	115	1160
9 mm Luger para	Jacketed Soft Point	95	1350



**FÉGARMY**

Fegyvergyártó Kft.

1095. Budapest, Soroksári út 158.

Telefon: 280 6880. Fax: 280 6684